




TOP AND CABINET PARTS

For Models: LSR8233JQ0, LSR8233JT0
(Designer White) (Biscuit)

AUTOMATIC
WASHER

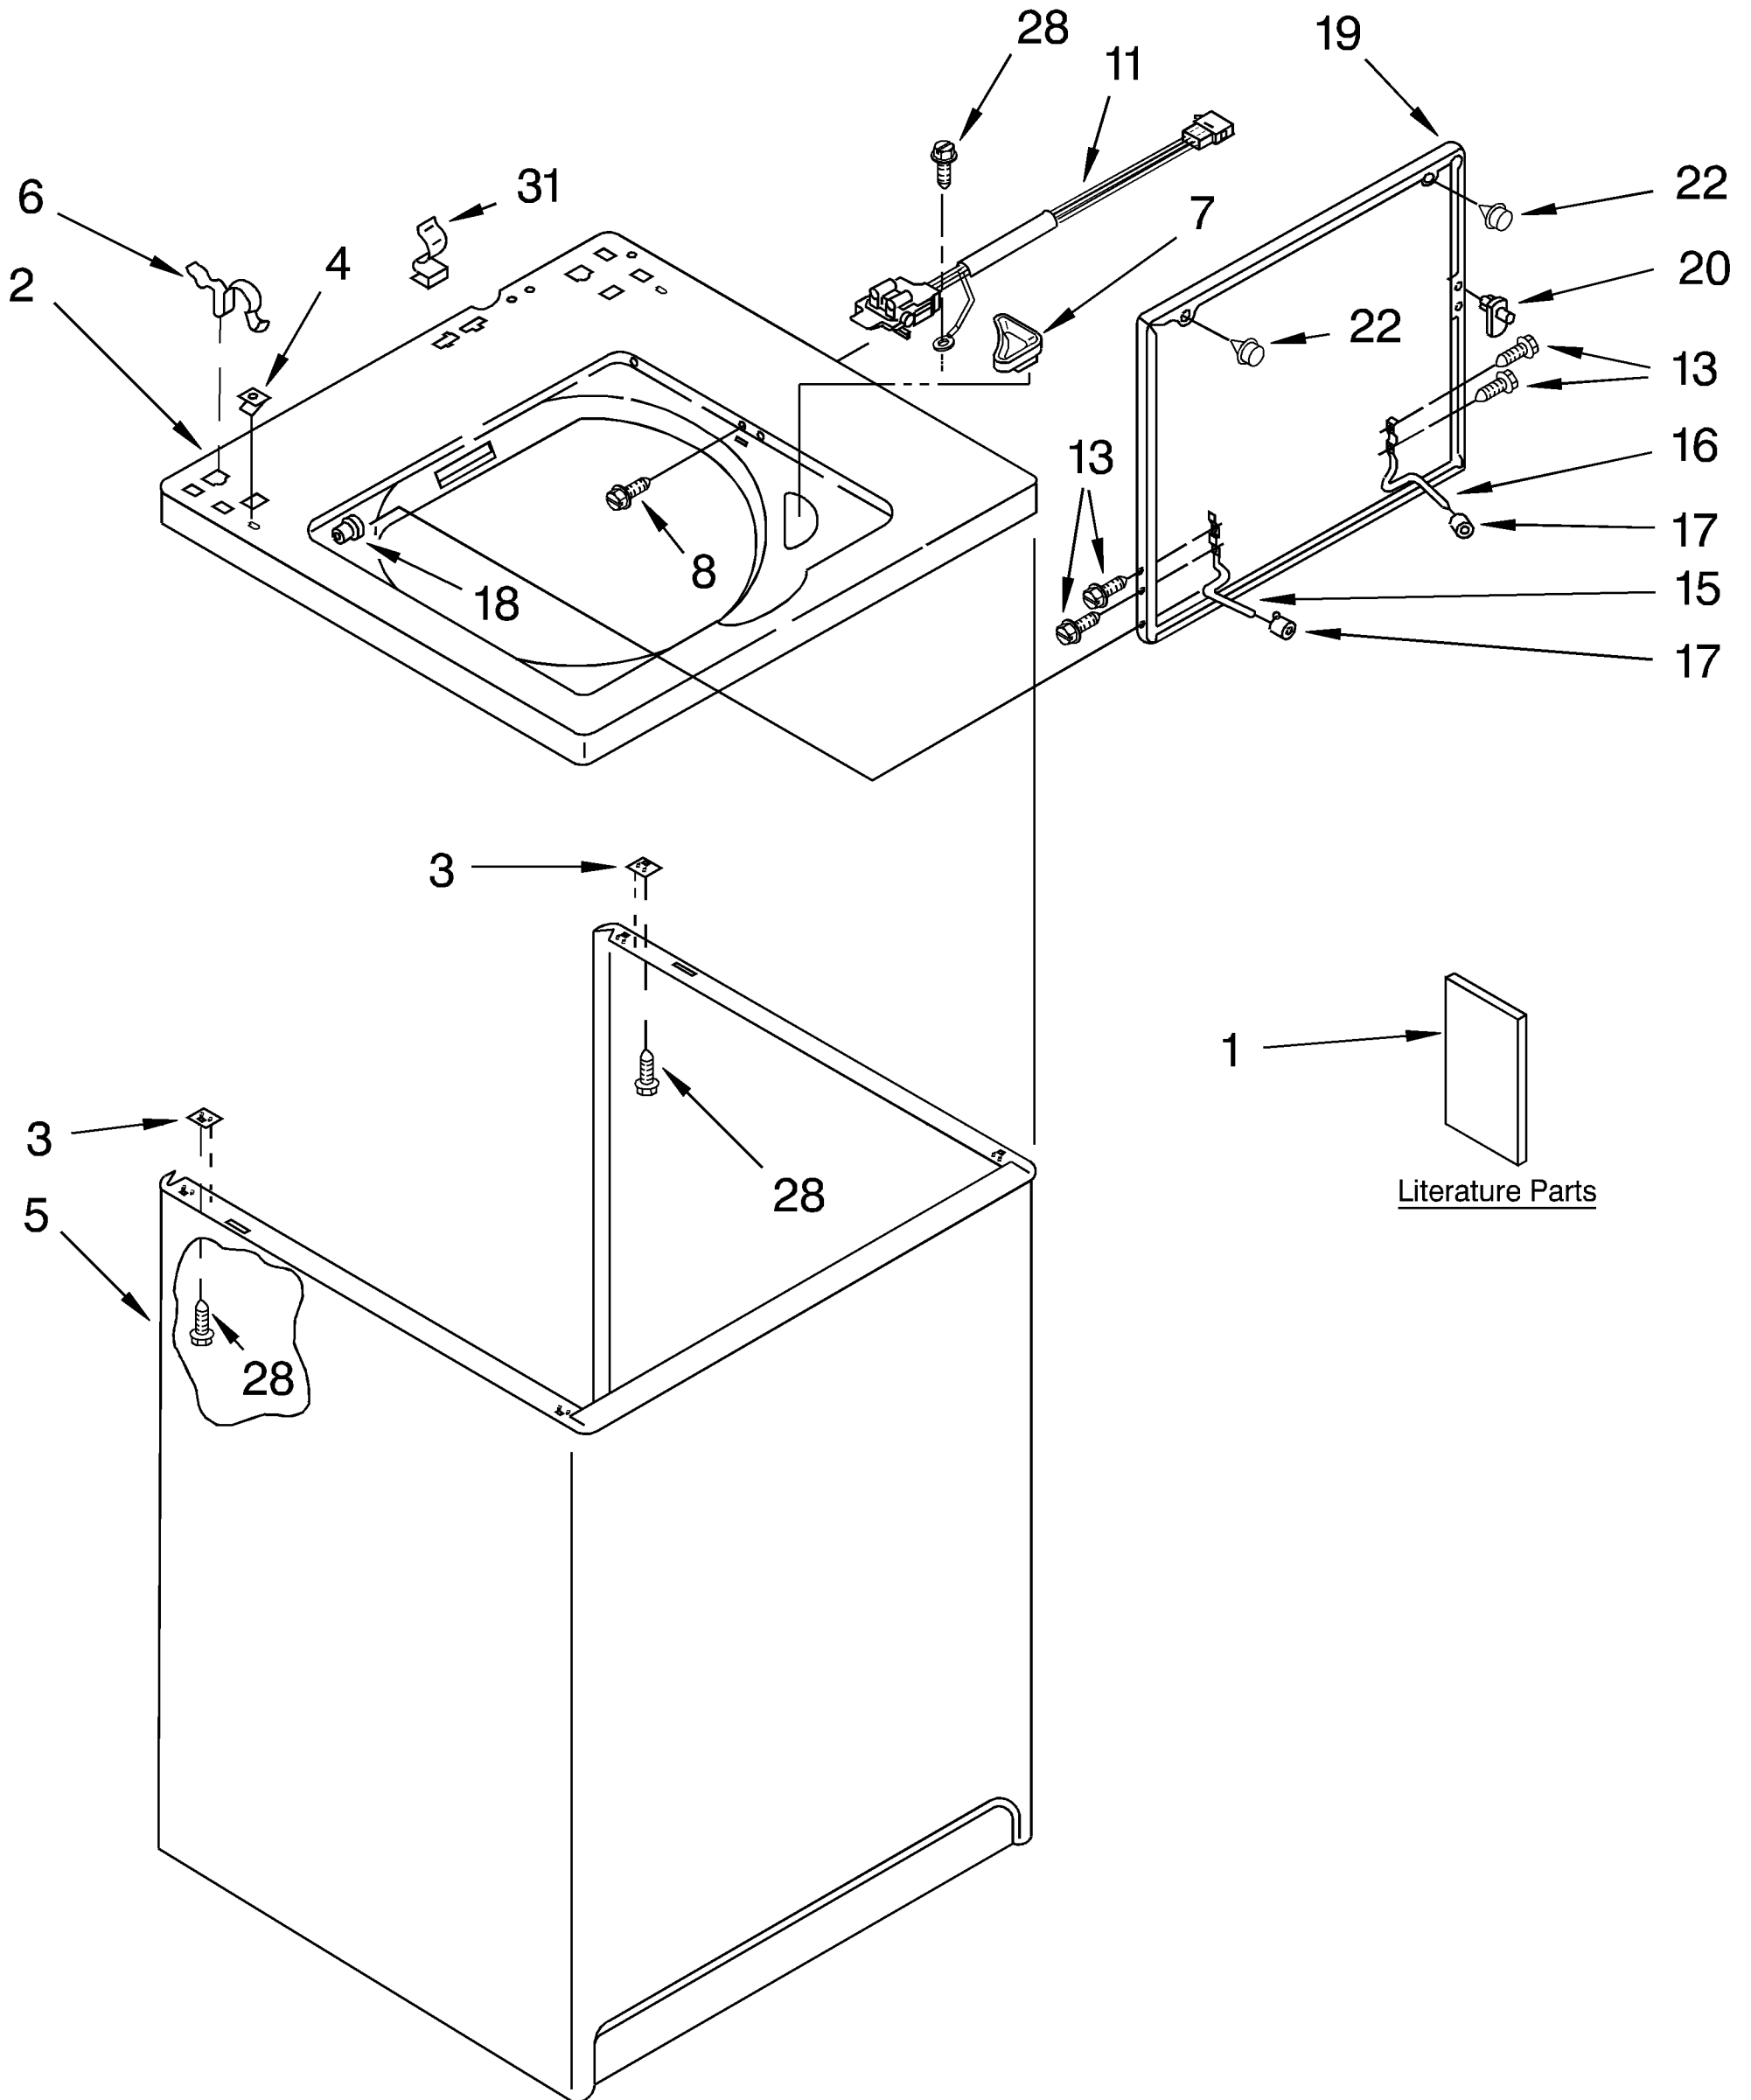

1		Literature Parts Installation Instructions
	LIT3952817	English
	LIT3951578	French Use & Care Guide
	LIT3953955	English
	LIT3951073	French
	LIT3953883	Energy Guide
	LIT3954578	Wiring Diagram

Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS


	LIT4313896	Manual, Washer
--	------------	----------------

2		Top
	8271378	White
	8271380	Biscuit
3	62750	Spacer, Cabinet To Top (4)
4	357213	Nut, Push-In (2)
5		Cabinet
	63424	White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	3362952	Dispenser, Bleach
8	3356311	Screw & Washer, Lid Switch (2)
11	3949237	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	54584	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	3361411	White
	3954457	Biscuit
20	358684	Strike, Lid Switch
22	9724509	Bumper, Lid (2)
28	62863	Screw, 10-16 x 3/8
31	90016	Clip, Harness

CONTROLS AND REAR PANEL PARTS

For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

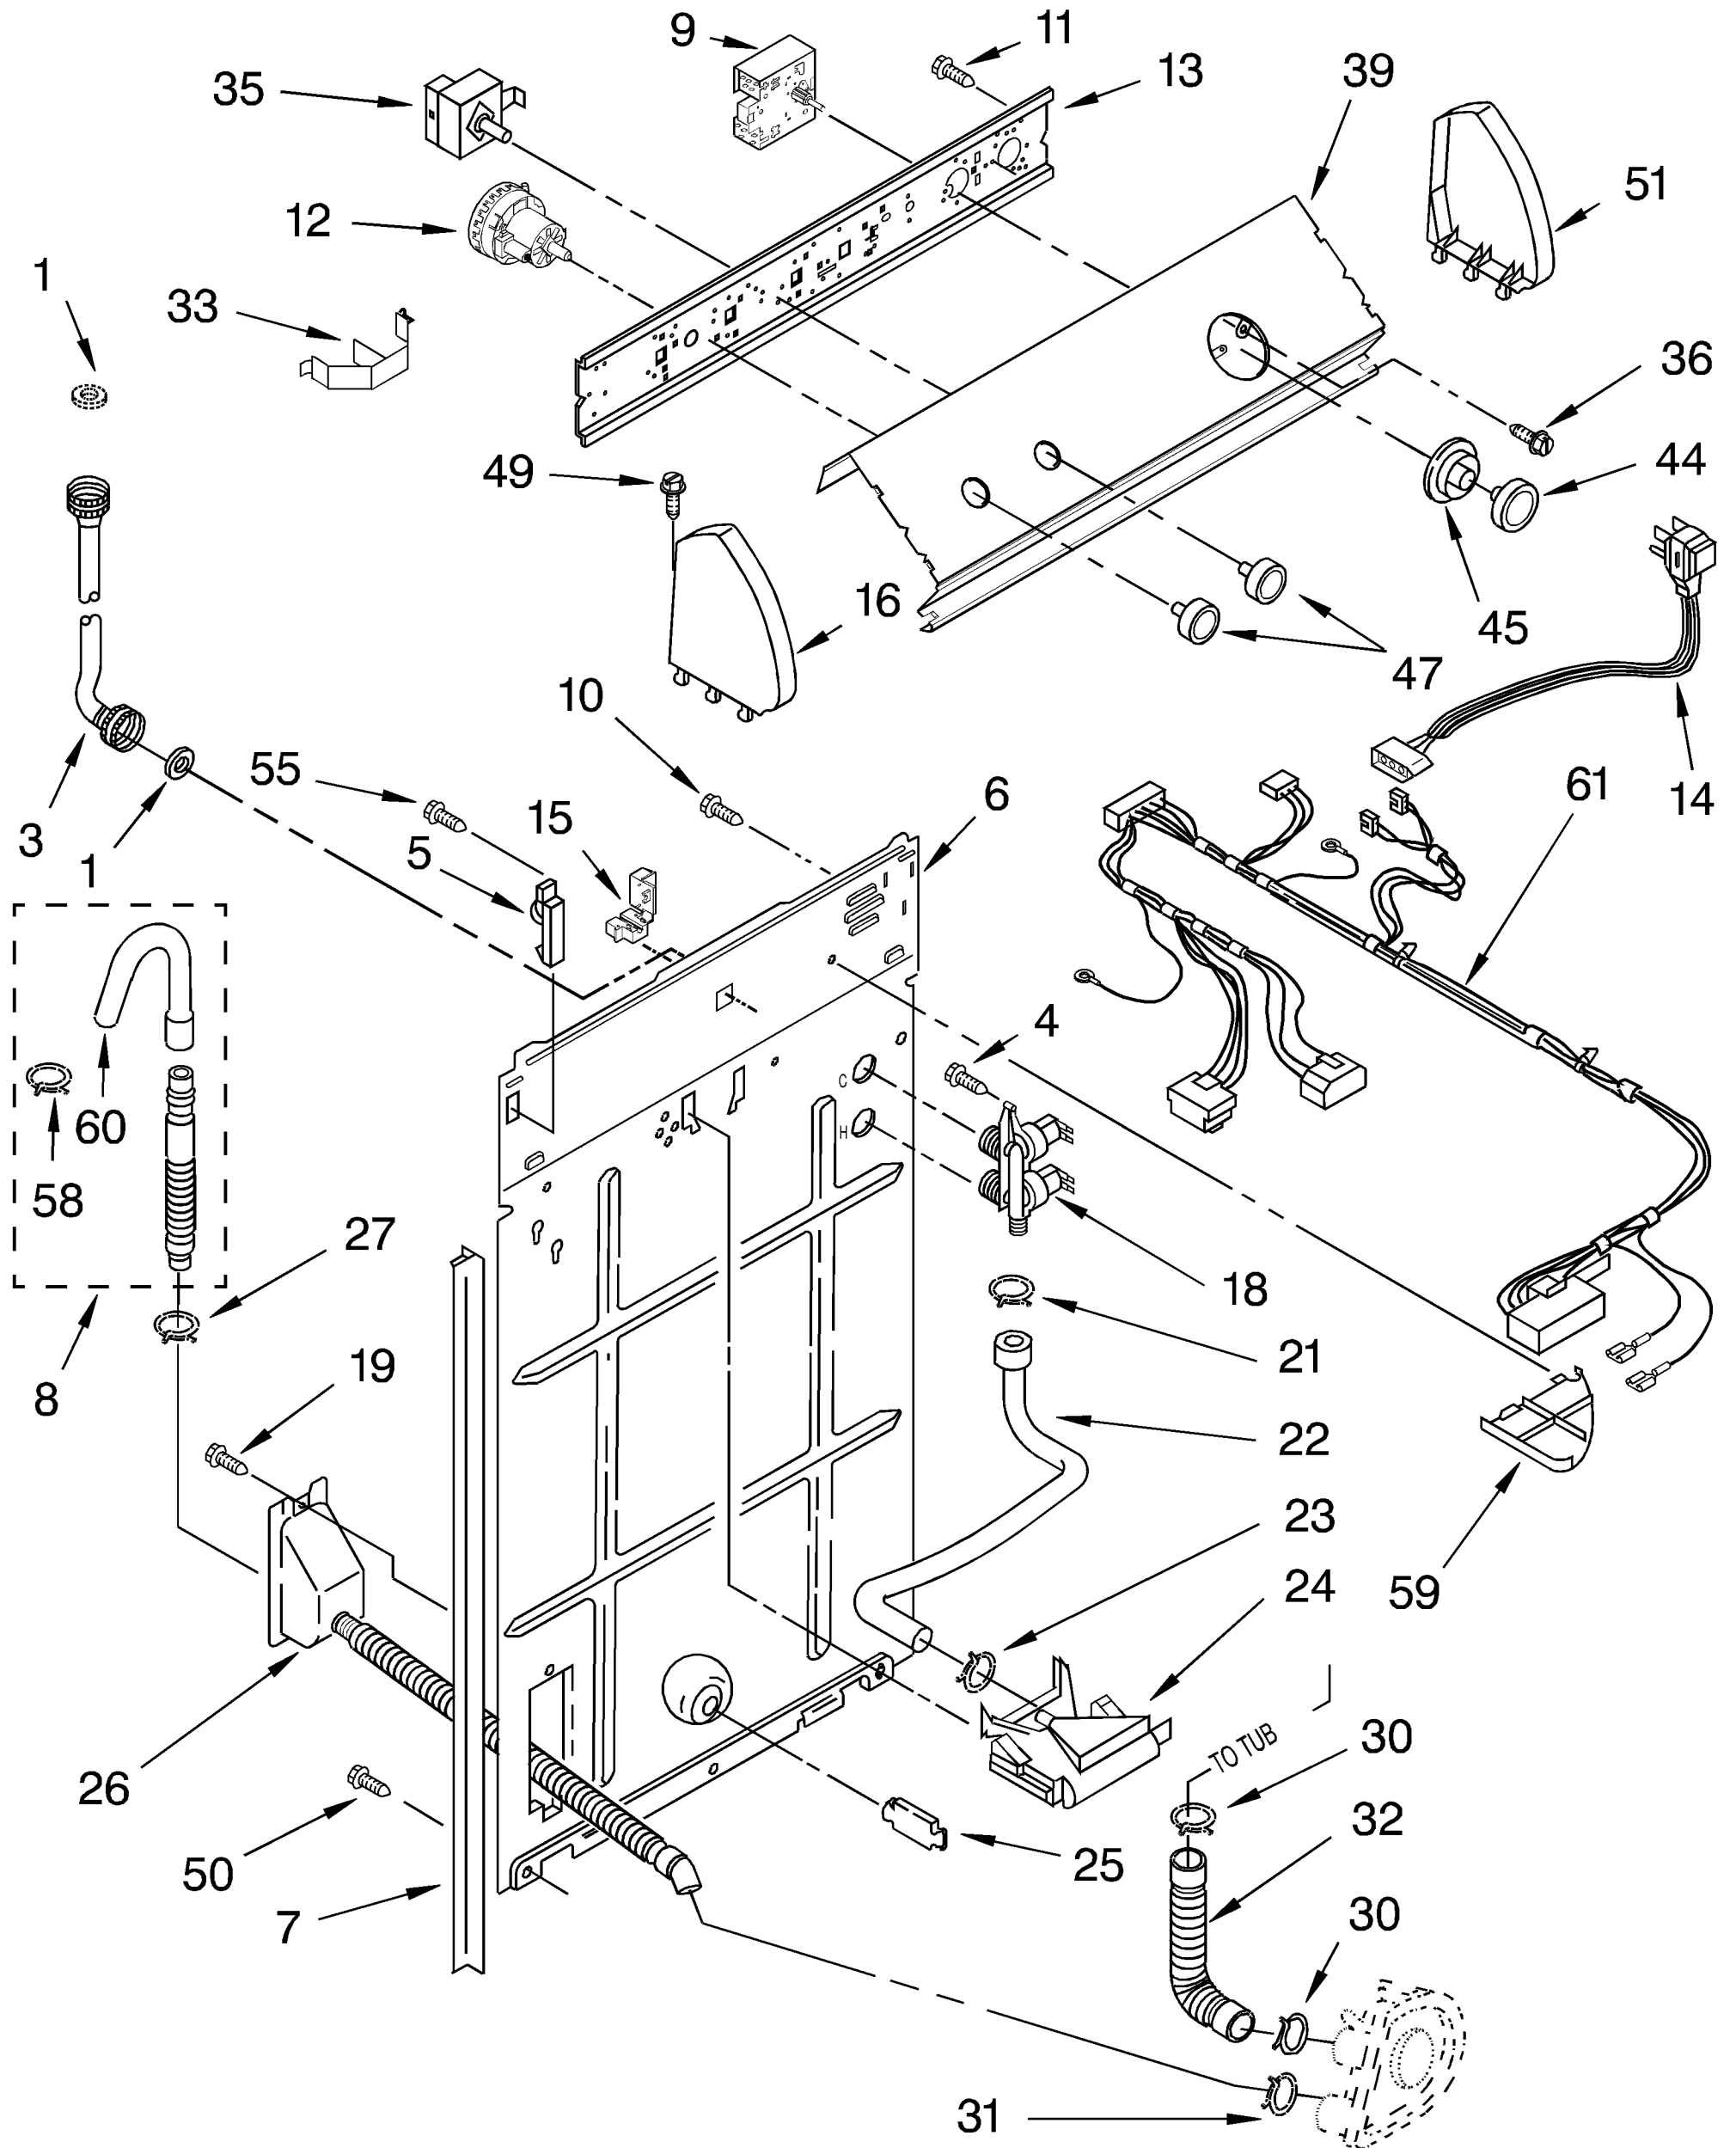


1	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)
3		Hose, Water Inlet (2)
	3949374	Blue Coupler
	3949375	Red Coupler
4	9740848	Screw
5	387402	Hinge, Console (2)
6	3357978	Panel, Rear
7	62747	Pad, Rear Panel
8	3951609	Hose, Drain (4 ft.)
	661577	Hose, Drain (9 ft.) (Not Included)
	3357090	Extension Drain-Hose (21 Inches) (Not Included)
9	3953146	Timer, Control (60 Hz.) (Motor Not A Service Part)
10	3351614	Screw, Ground
11	90767	Screw
12	3366848	Switch, Water Level
13	3948608	Bracket, Control
14	3948063	Cord, Power
15	3952821	Strain Relief, Power Cord
16		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
18	3952164	Valve, Water Mixing
19	90864	Screw, 10-24 x 3/8
21	370451	Clamp, Hose
22	3357328	Hose, Vacuum Break
23	371503	Clamp, Hose
24	387606	Break, Vacuum
25	63290	Support, Rear Panel
26	3361805	Hose-Corrugated Assembly
27	3366912	Clamp, Hose
30	3363366	Clamp, Hose
31	660628	Clamp, Hose
32	3951449	Hose, Pump To Tub
33	8055003	Clip, Harness & Pressure Hose
35	661612	Switch, Water Temperature
36	3400808	Screw, Timer Mounting
39		Panel, Console
	3954183	White
	3954184	Biscuit
44		Knob, Timer
	8271345	White
	8271347	Biscuit
45		Dial, Timer
	8271351	White
	8271370	Biscuit
47		Knob, Control
	8271339	White
	8271348	Biscuit
49	388326	Screw, 8-18 x 1.25 (Panel to Top)
50	62863	Screw, 10-16 x 3/8
51		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
55	3390647	Screw, 8-18 x 1/2
58	3366913	Clamp, Drain Hose
59	3348424	Shield, Suds
60	3357027	Nozzle-Drain Hose
61	3953617	Wiring Harness (For Detail See Parts Page)

AGITATOR, BASKET AND TUB PARTS

For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

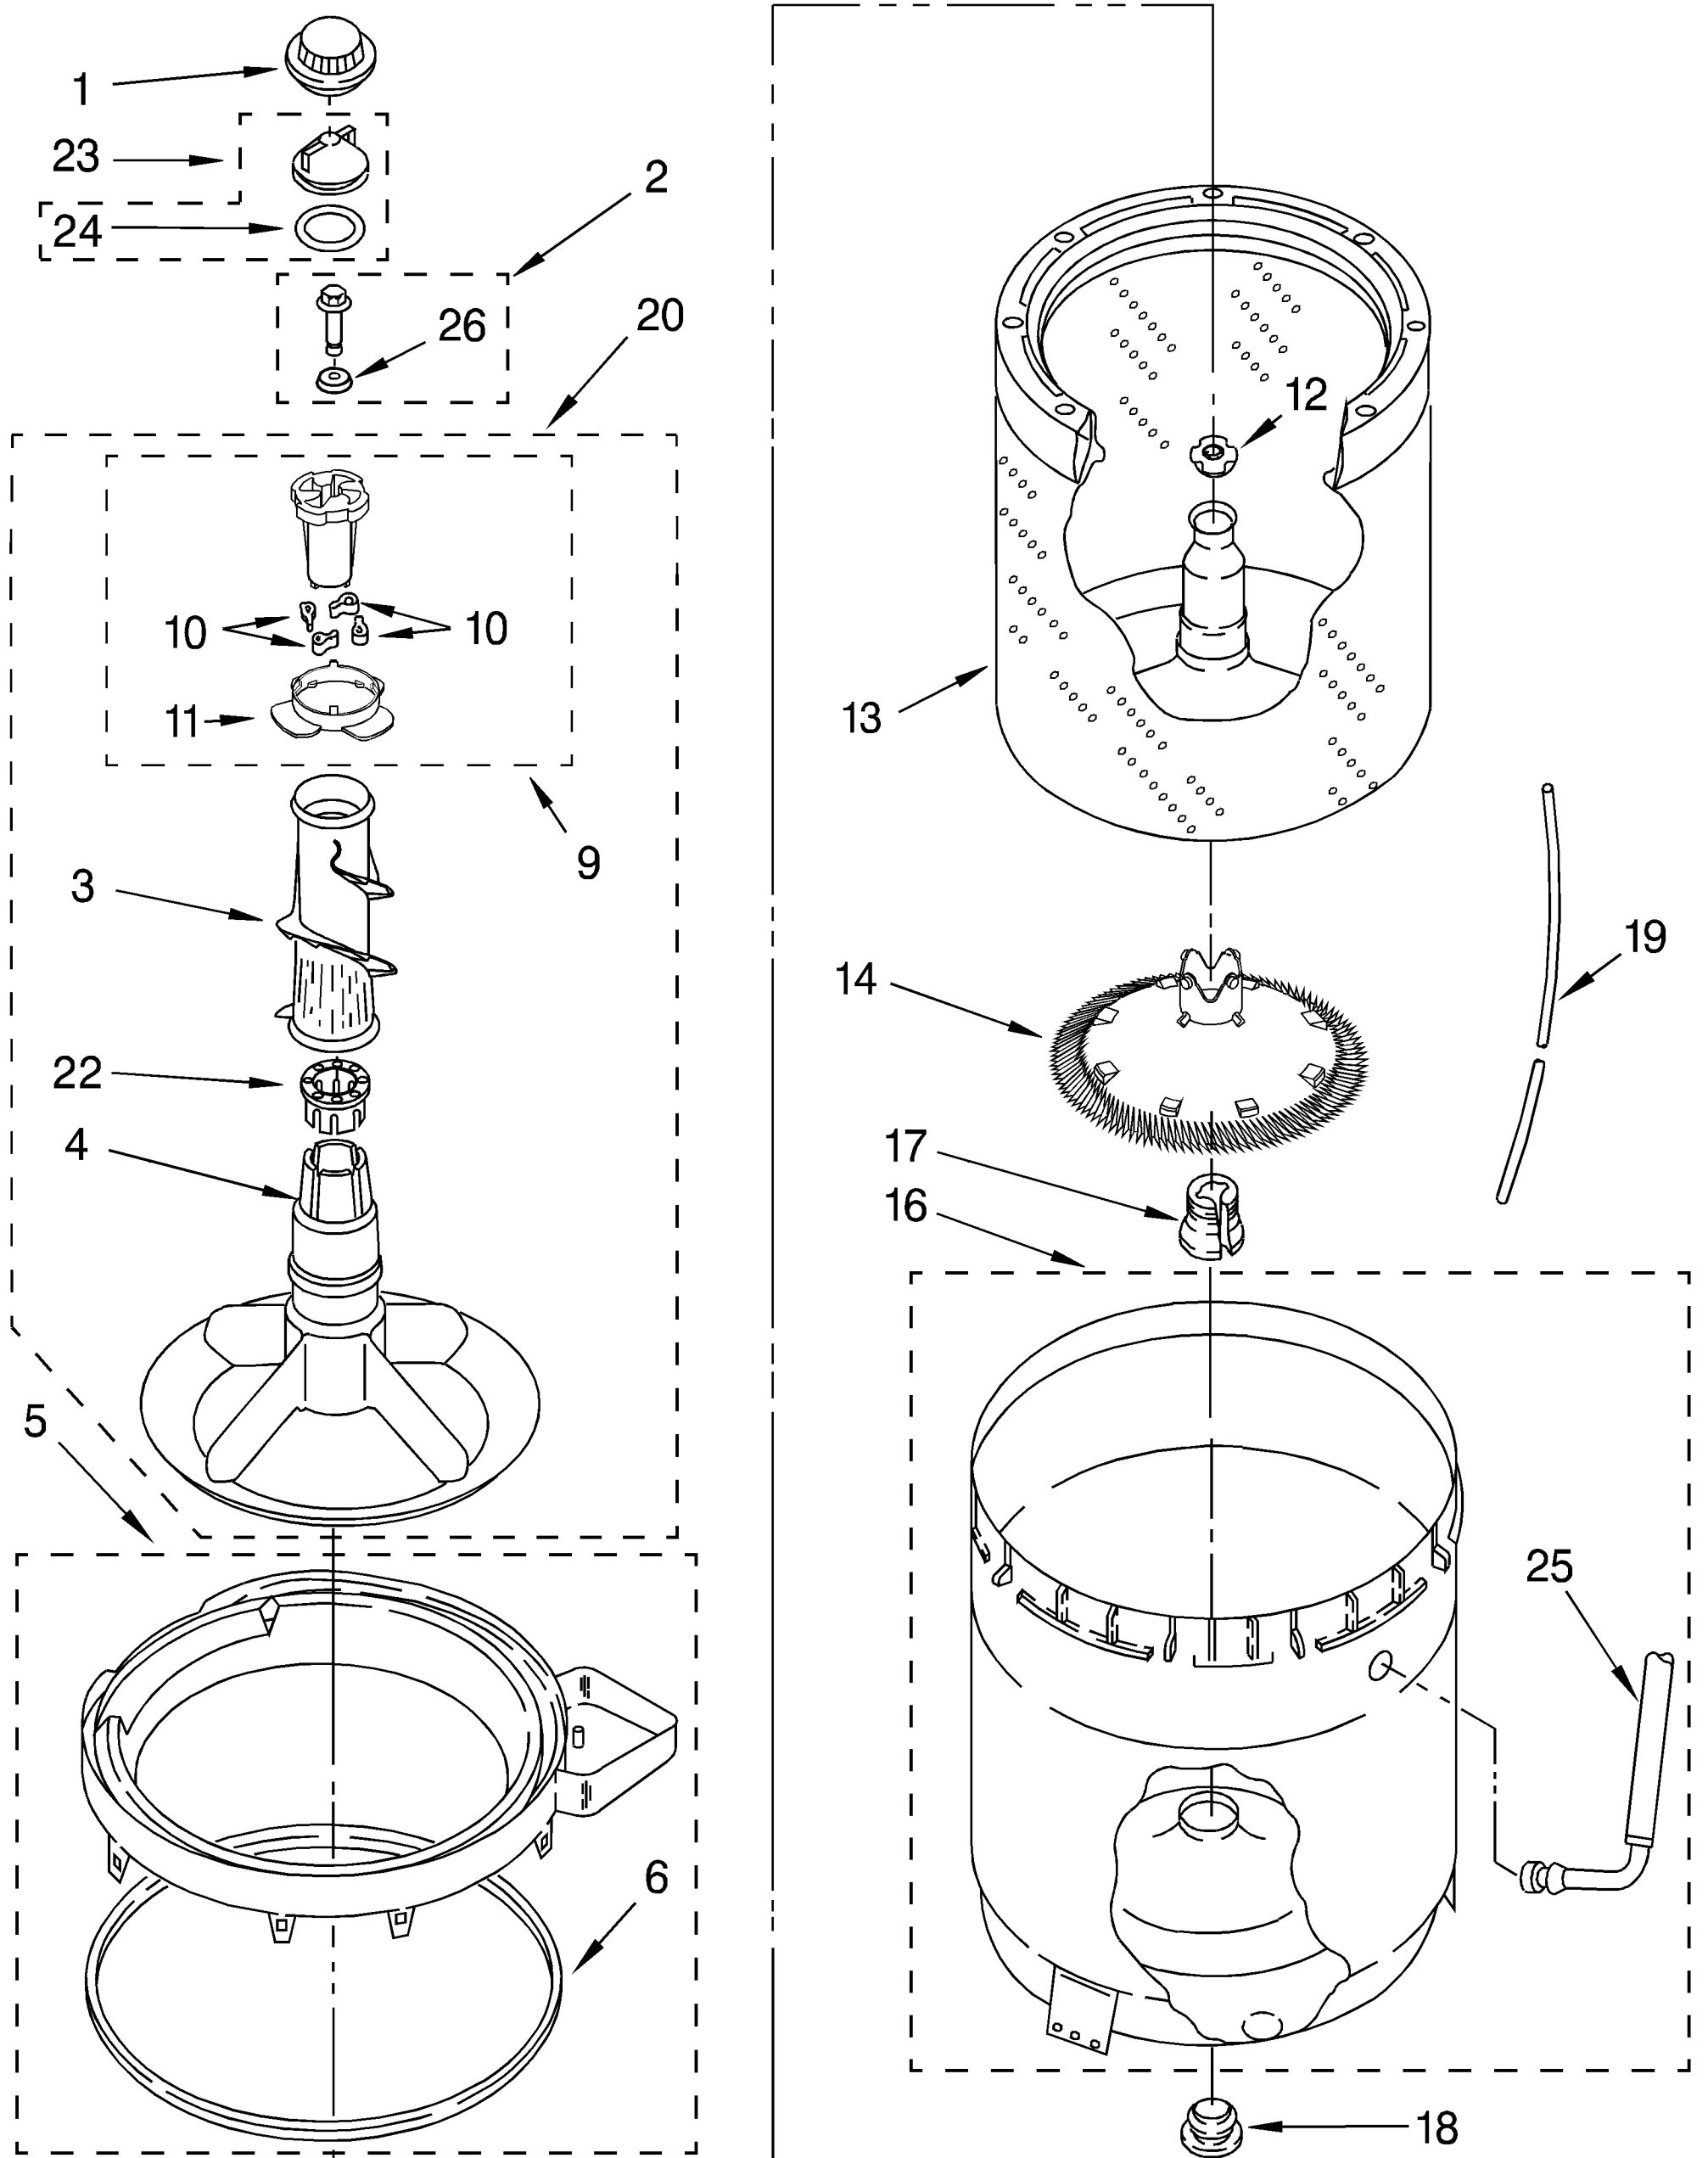


1	3355758	Cap, Agitator
2	358237	Screw & Washer (5/16-24 x 1)
3	3348752	Clothes Mover
4	3347288	Agitator
5	63851	Tub Ring & Gasket
6	3359585	Gasket, Tub Ring
9	3363663	Cam, Driven
10	3366877	Dog, Agitator Clutch
11	3363661	Bearing, Cam Driven
12	21366	Nut, Spanner
13	3951989	Basket & Balance Ring (Also Order #14)
14	3952746	Filter, Plate
16	388893	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
20	3348117	Agitator (Complete)
22	3350389	Spacer, Thrust
23	3347290	Cap, Barrier
24	3348855	Seal, Inner Cap
25	3948705	Hose, Bleach
26	3949550	Washer

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

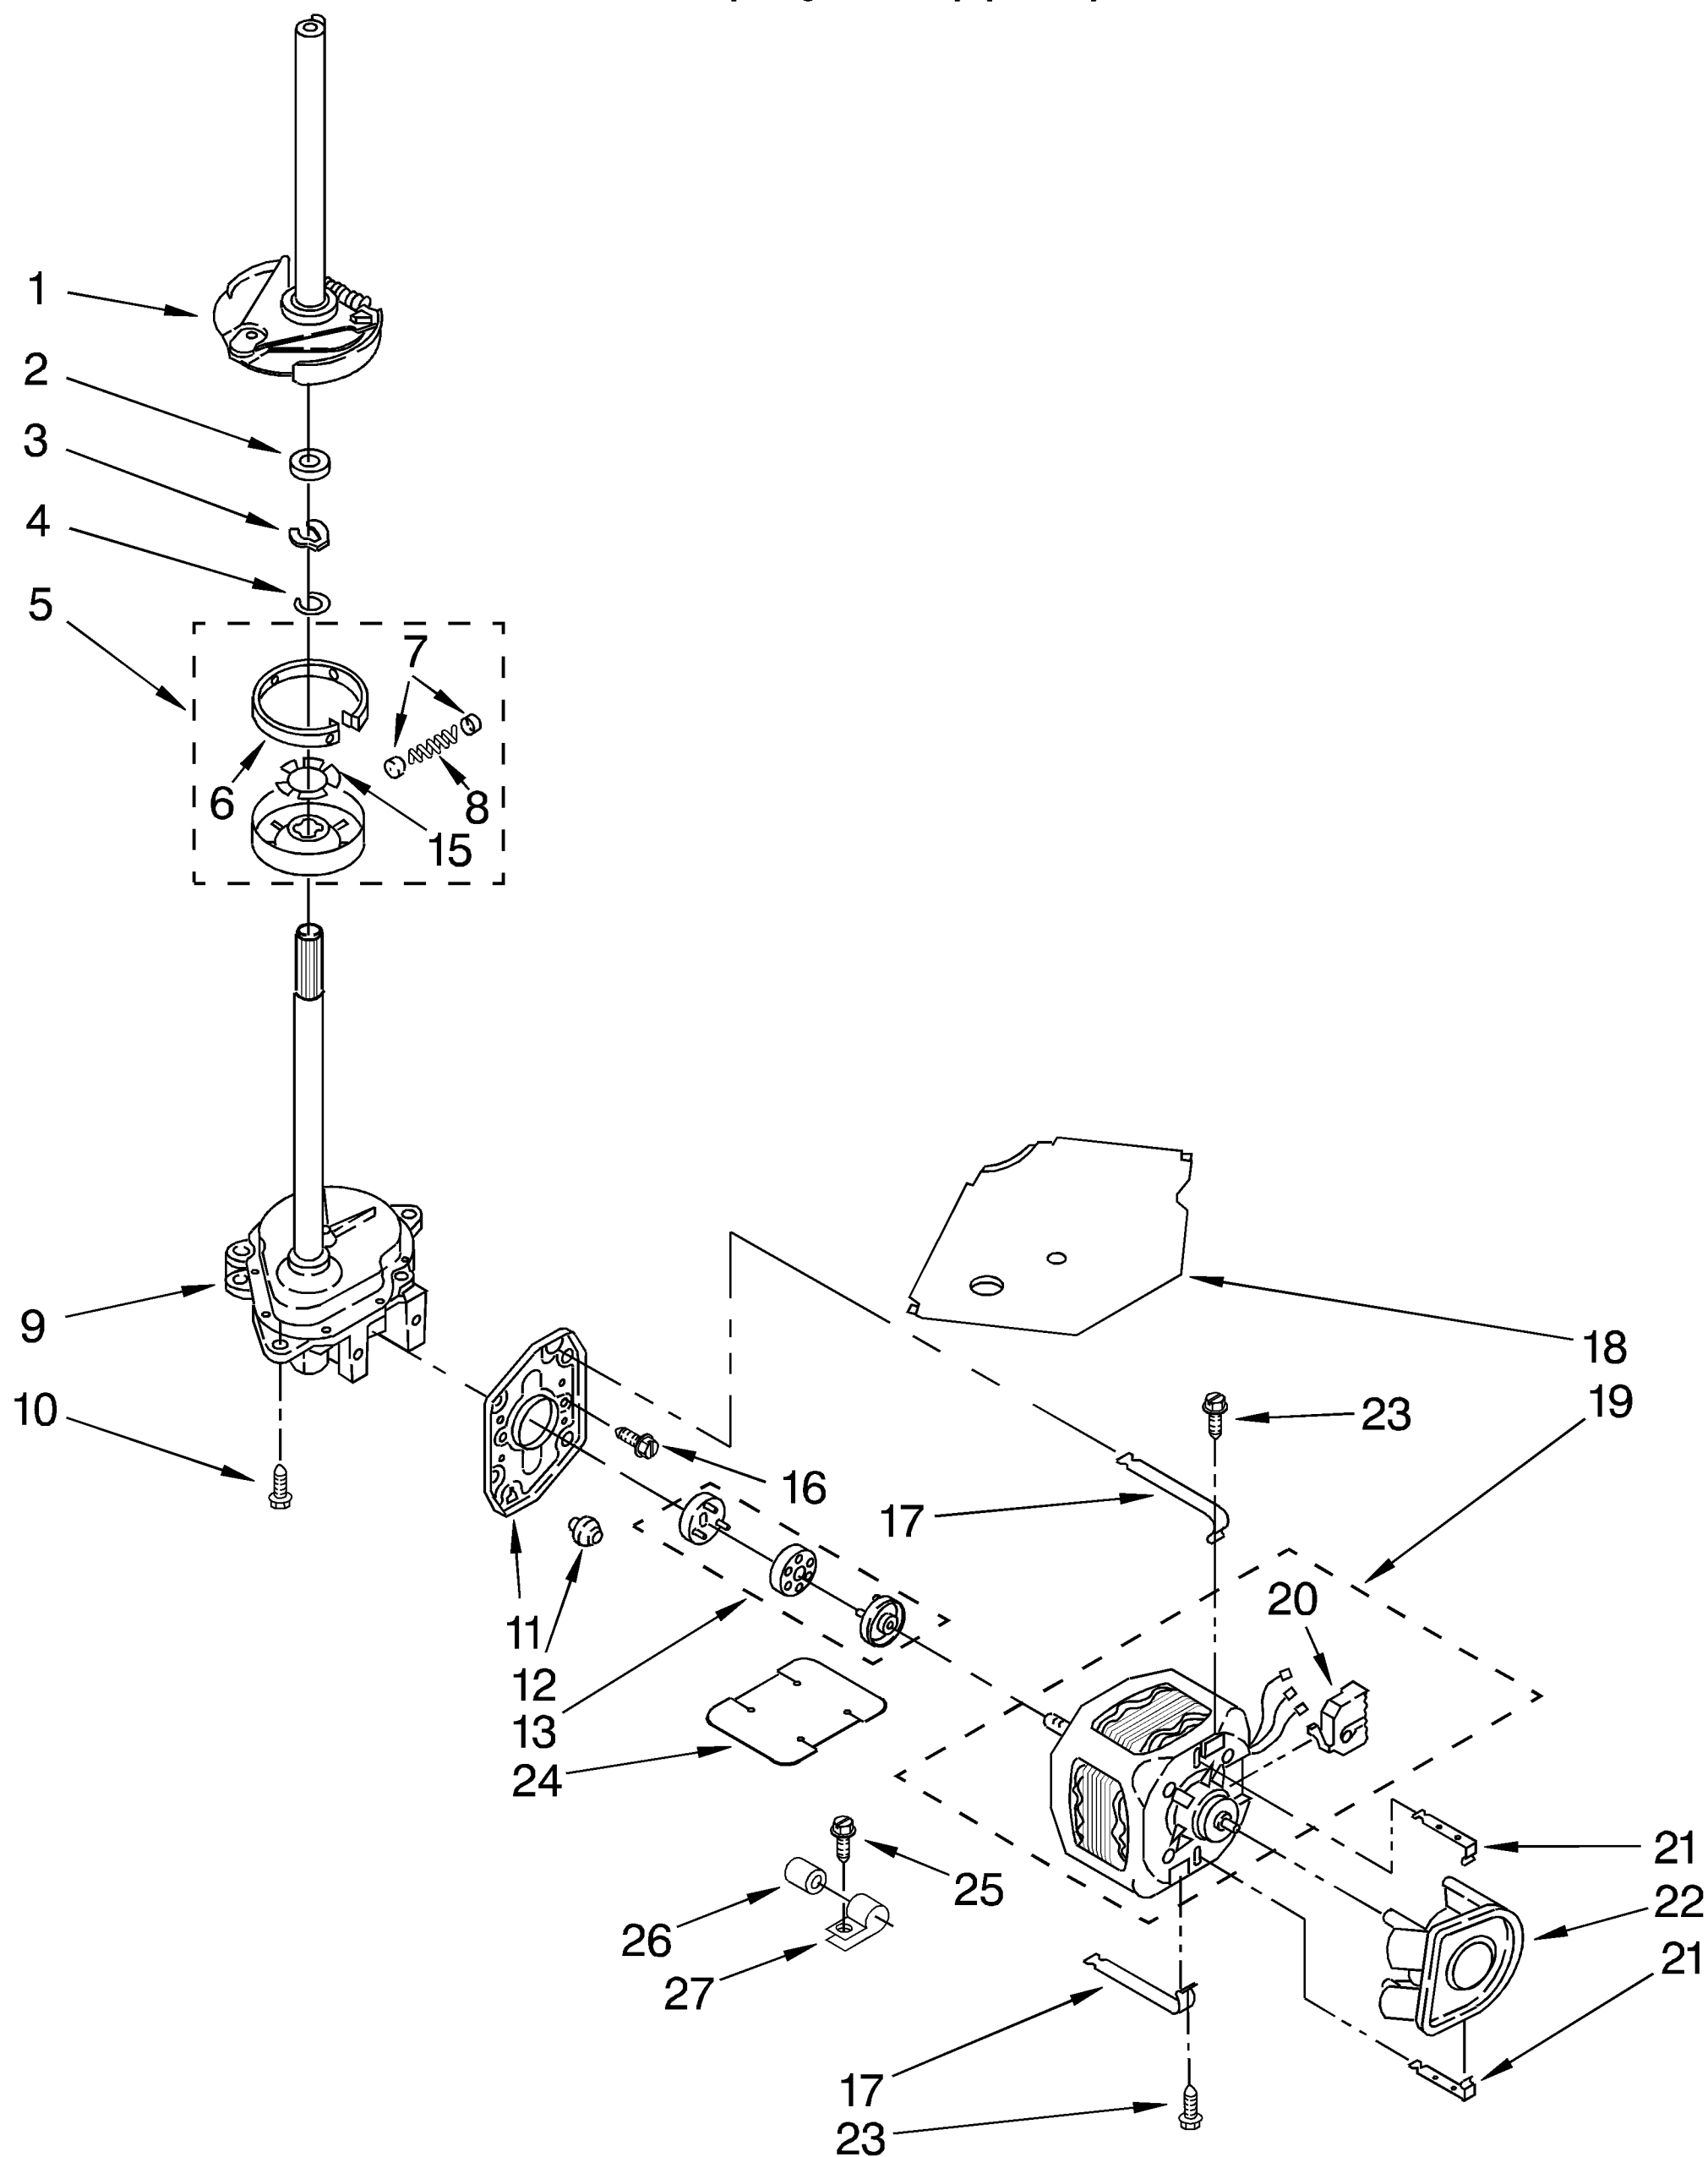


1	388952	Brake & Drive Tube (Complete) (Refer to Parts Page For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Parts Page For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	3364003	Coupling, Motor & Isolation
15	3355454	Clip, Anti-Rattle
16	3400516	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	661599	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	62700	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10-16 x 5/8
24	3946532	Shield, Motor
25	62863	Screw, 10-16 x 3/8
26	661606	Capacitor
27	357030	Clamp, Capacitor

MACHINE BASE PARTS


For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

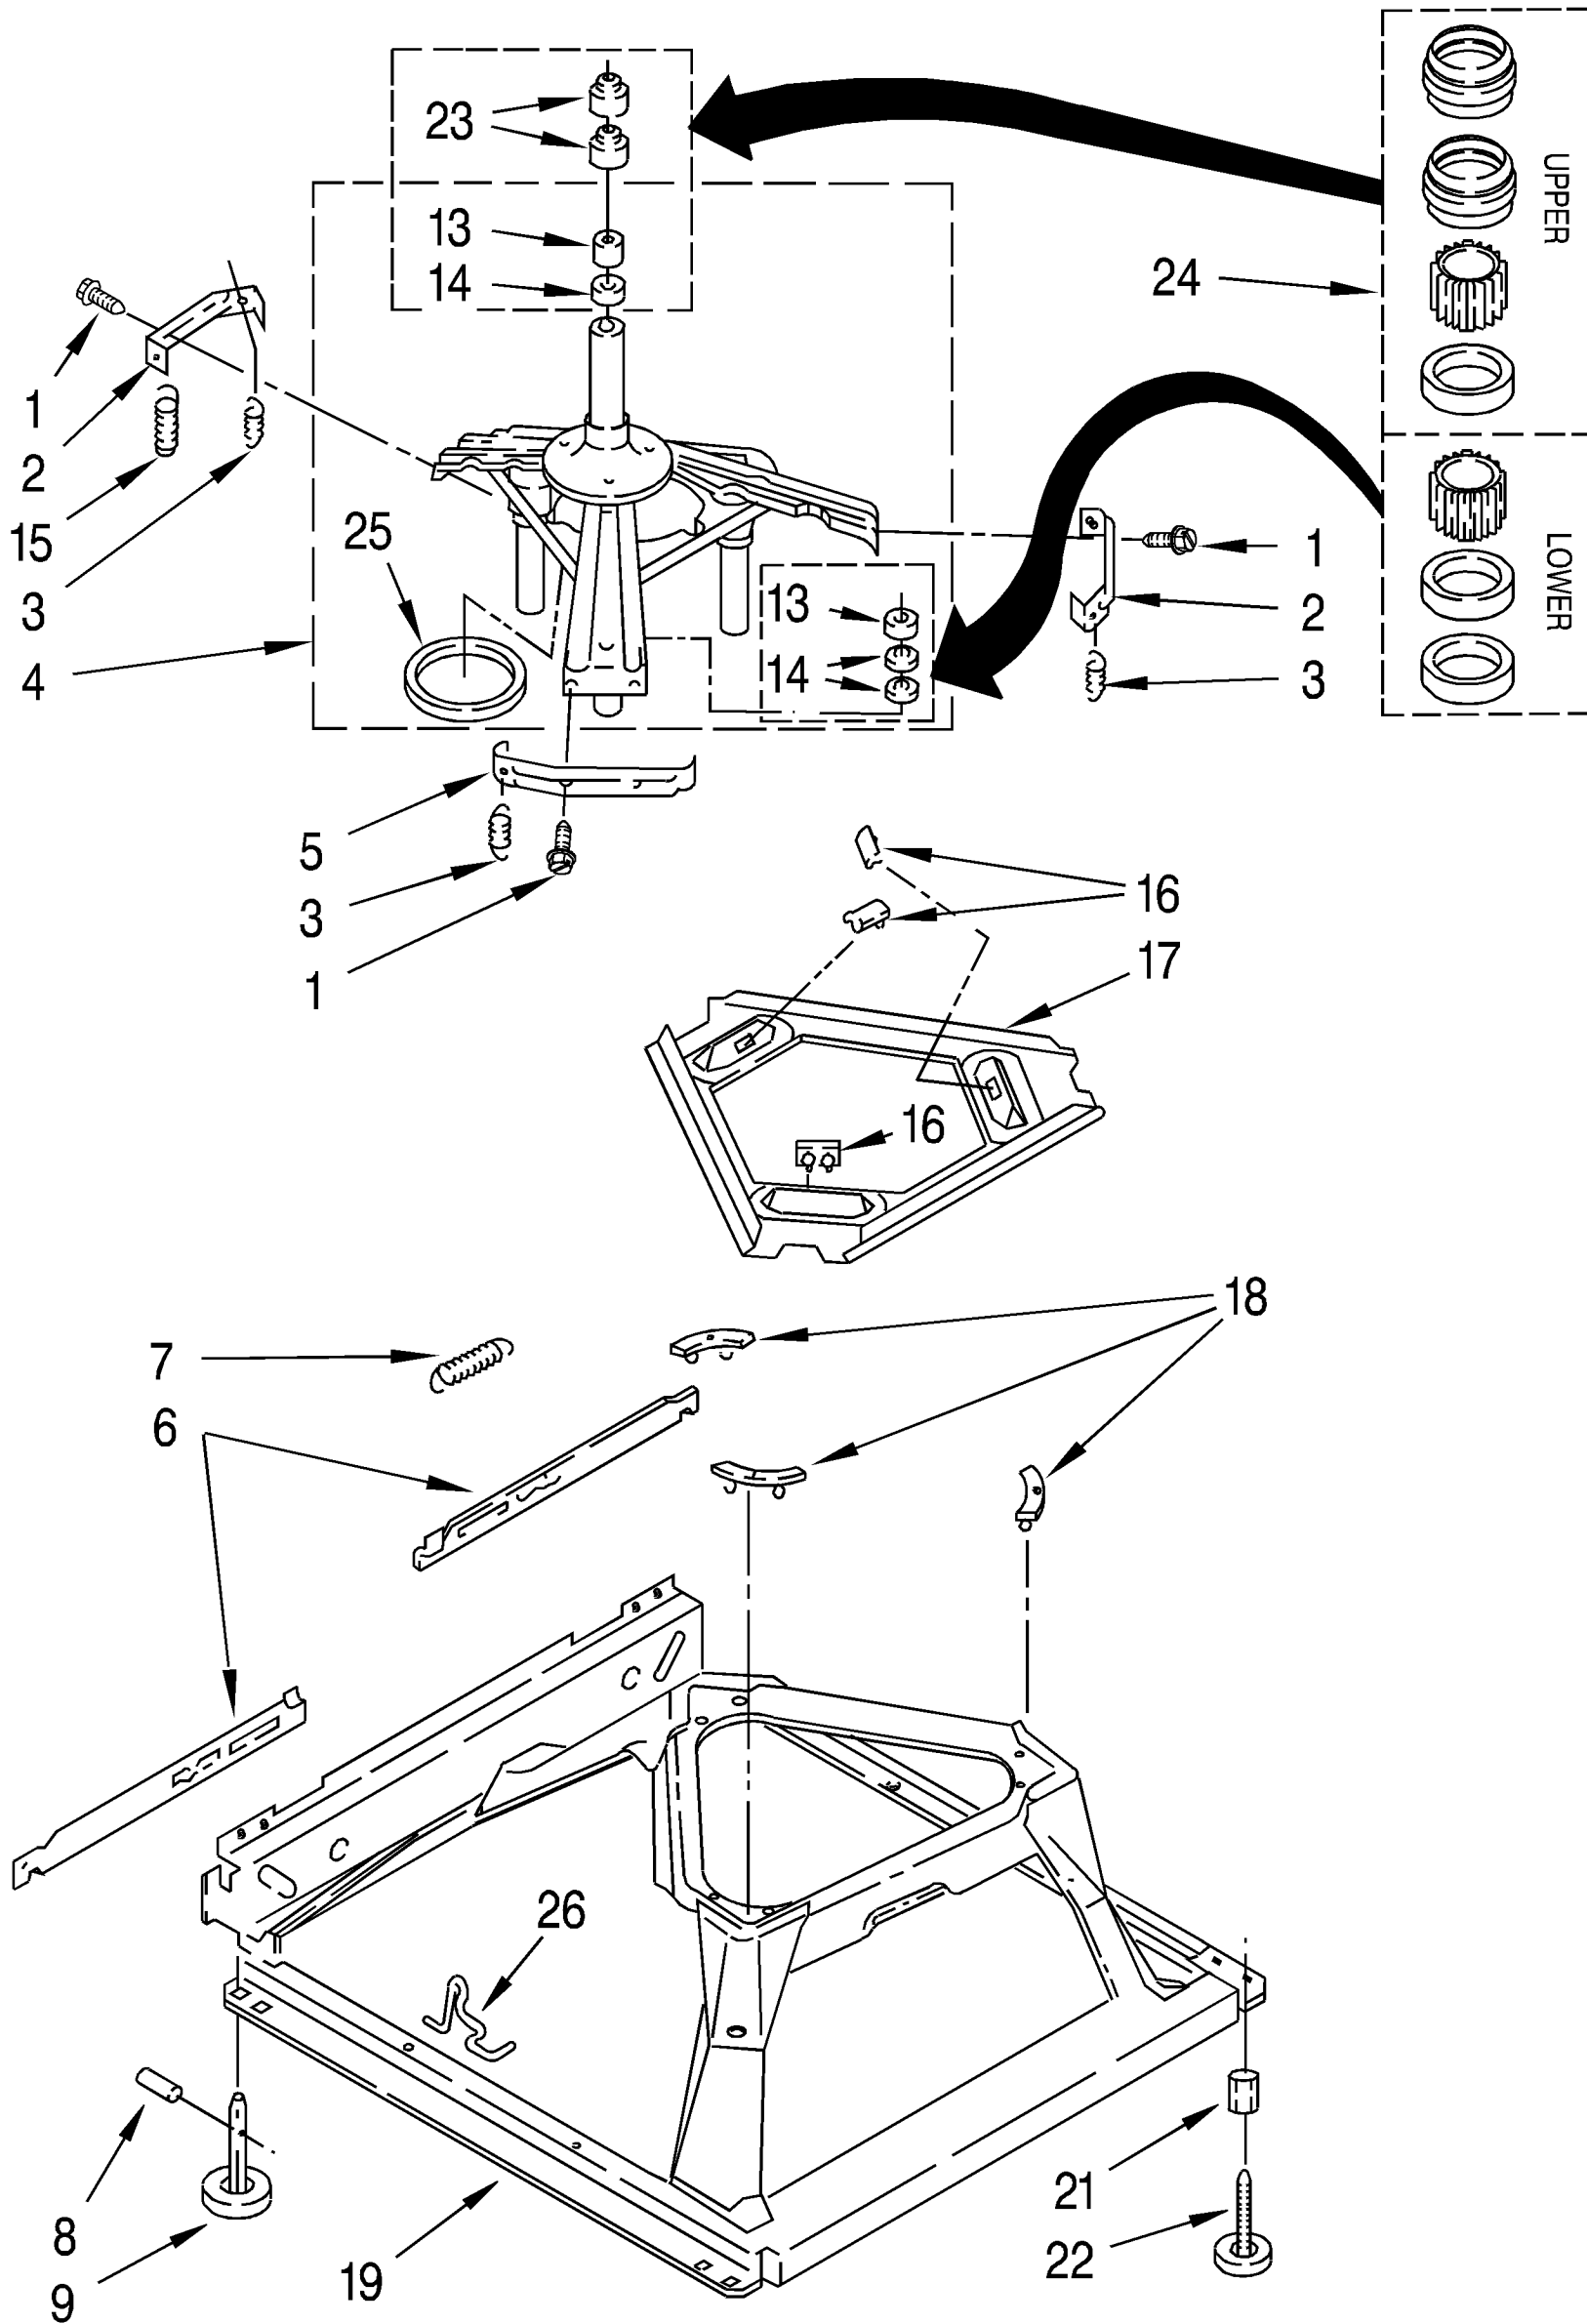

1	3196174	Screw, Bracket Mounting (10-16 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension,(3)
4	3362087	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus, 6, 7, 8, 9, 16, 17 18 & 26)
21	3359452	Nut, Lock (3/8-16) (2)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring

WIRING HARNESS PARTS
For Models: LSR8233JQ0, LSR8233JT0
(Designer White) (Biscuit)

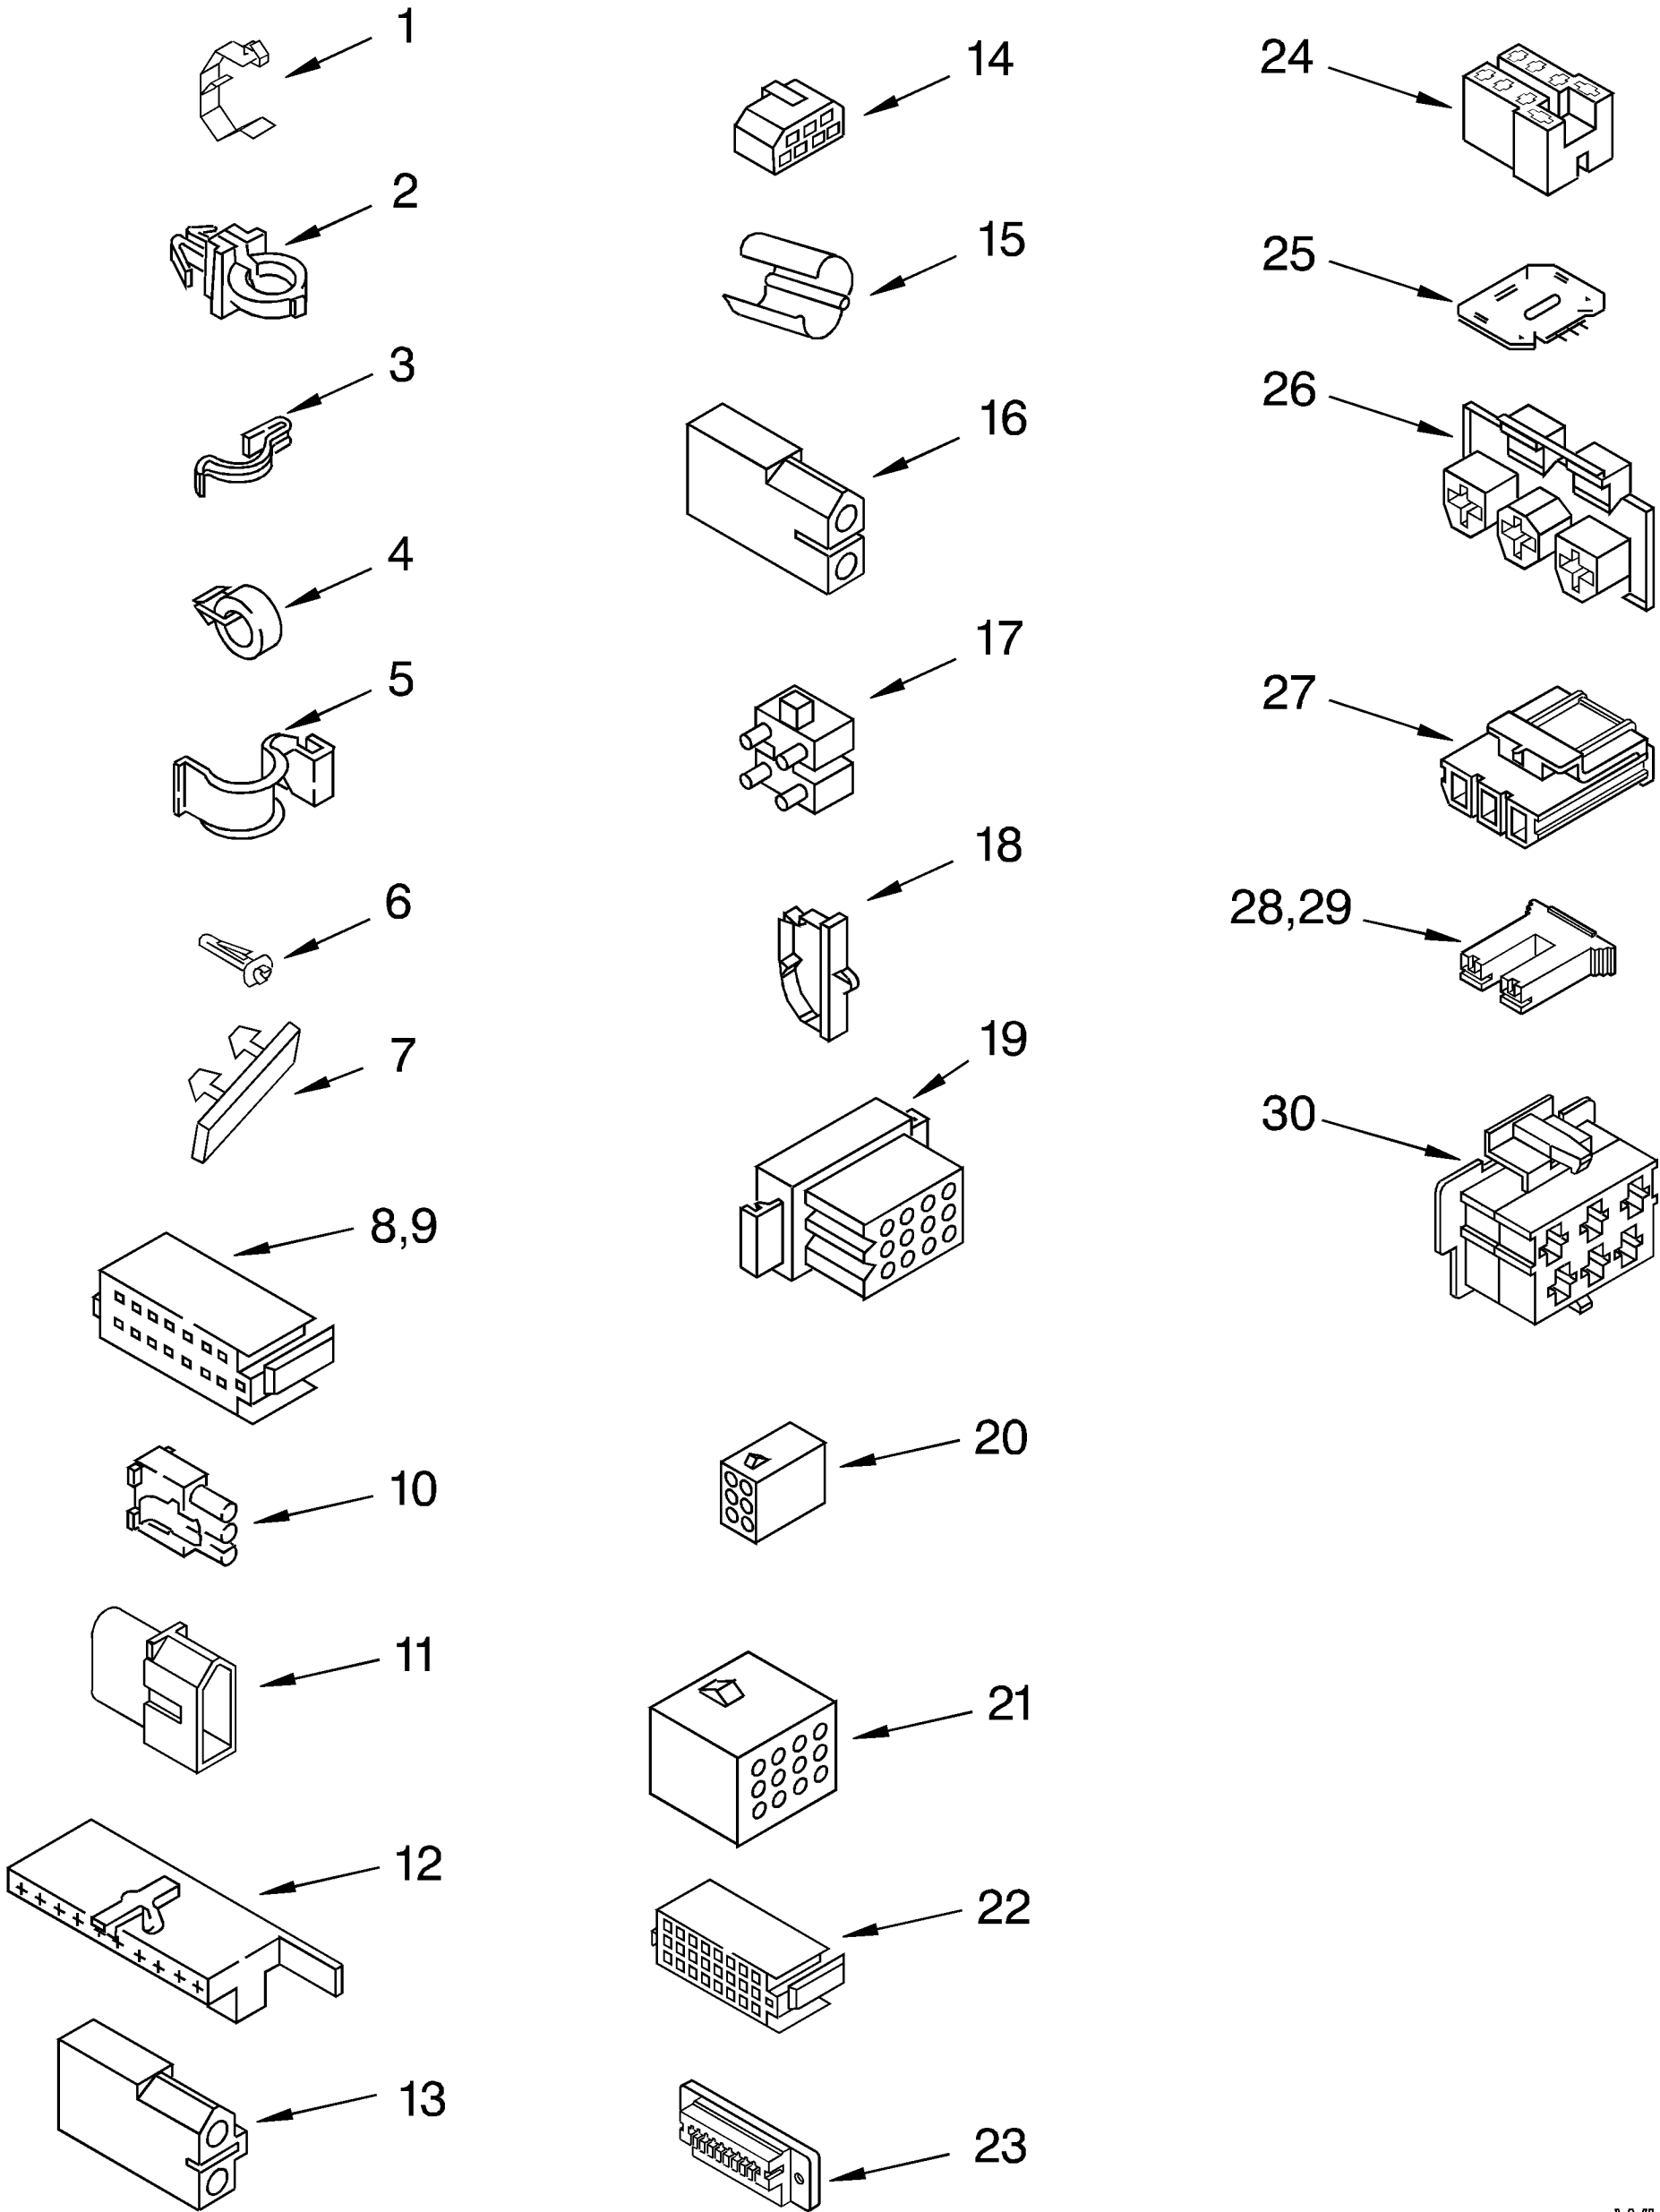


WH2G

1	3349557	Clip, Harness
2	388498	Clip, Harness
3	3347812	Clip, Harness
4	3352501	Clip, Harness
5	90016	Clip, Harness
6	3390496	Clip, Harness
7	389379	Retainer, (Suds Models)
8	352090	Timer, Block Disconnect (White)
9	352089	Timer, Block Disconnect (Black)
10	62889	Receptacle, Terminal (3-Way) (Lid Switch) (Use Term. 94613 Or 94614.)
11	353424	Plug, Terminal (3-Way) (Power Cord) (Use Term. 94613)
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term. 352088)
13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)
14	3347243	Block, Disconnect (Use Term. 352088)
15	63523	Protector
16	717252	Connector (2-Way) (Use Term. 94614)
17	387566	Plug, Terminal (4-Way) (Power Cord) (Use M3 Screws)
18	3352944	Clip, Harness
19	3390423	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)
20	3347730	Receptacle (6-Way) (Use Term. 94613)
21	388818	Plug, Terminal (12-Way) (Use Term. 94613 Or 94614.)
22	3369366	Timer, Block Disconnect (Black) (Amp) (Use Term. 3369365)
23	3349494	Connector, Etc
24	60687	Connector, Relay (Use Term. 308569)
25	3407125	E.T.C. Control
26	3948617	Connector (T.P.A.) (3-Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.)
27	3360056	Connector (T.P.A.) (3-Circuit) (Pressure Switch) (Use Term. 3948619 OR 3948620.)
28	3354925	Block, Connector (Cold Valve) (Use Term. 693217)
29	3354926	Block, Connector (Hot Valve) (Use Term. 693217)
30	3948615	Connector (T.P.A.) (6-Circuit) (Temp. Switch) (Use Term. 3948619 OR 3948620.)

BRAKE AND DRIVE TUBE PARTS

For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

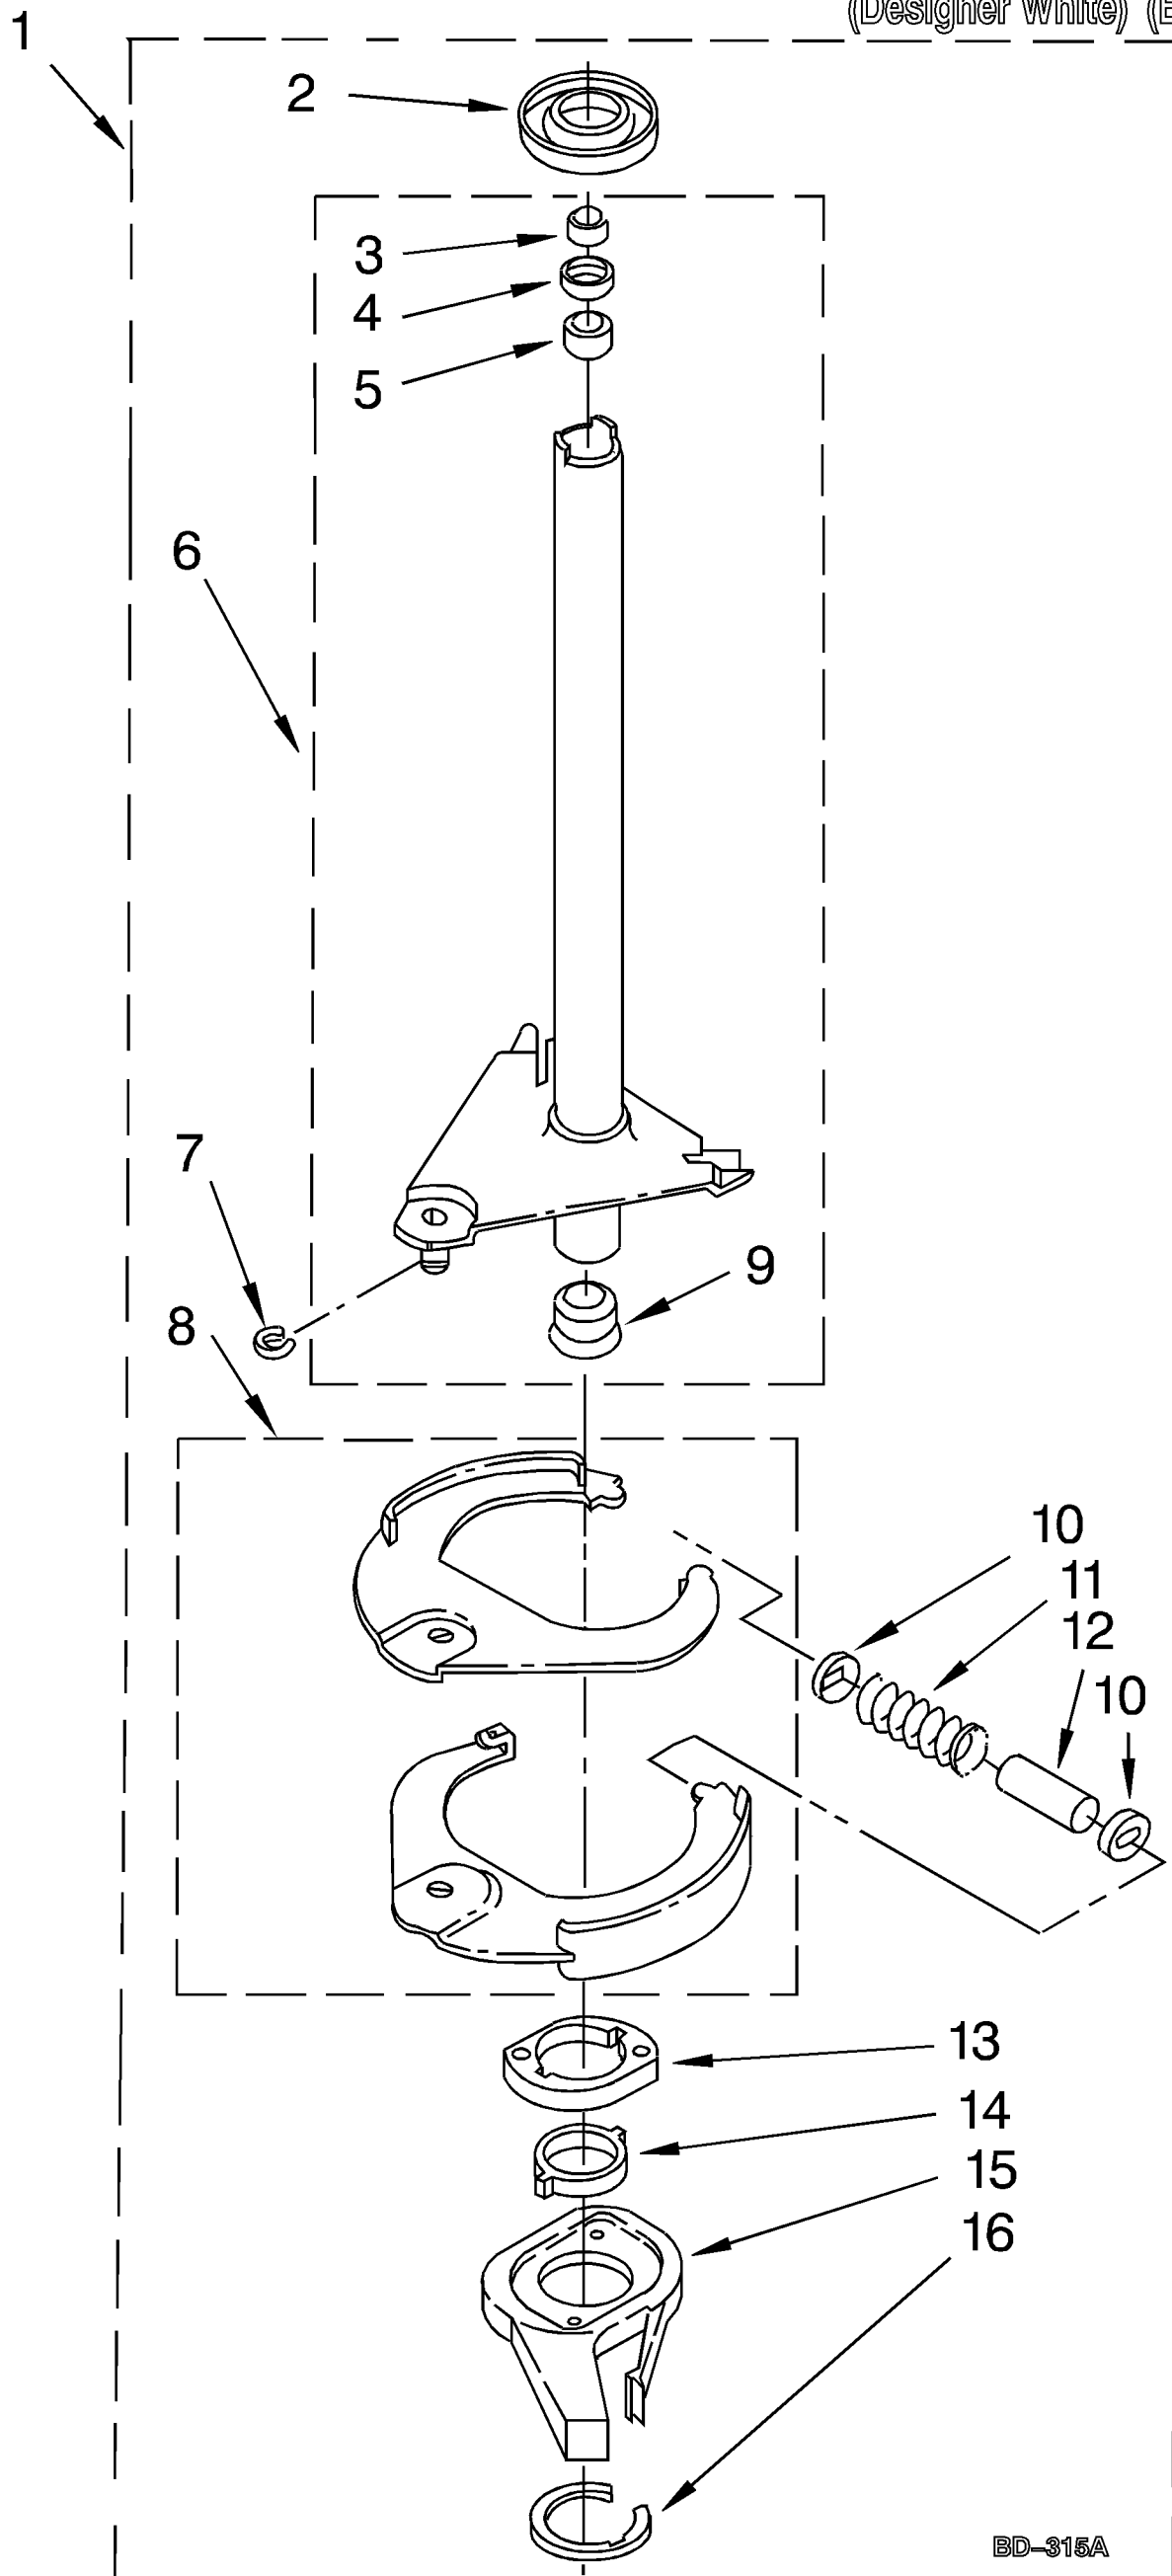


BD-315A

1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

285208	Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)
--------	---

GEARCASE PARTS
For Models: LSR8233JQ0, LSR8233JT0
(Designer White) (Biscuit)



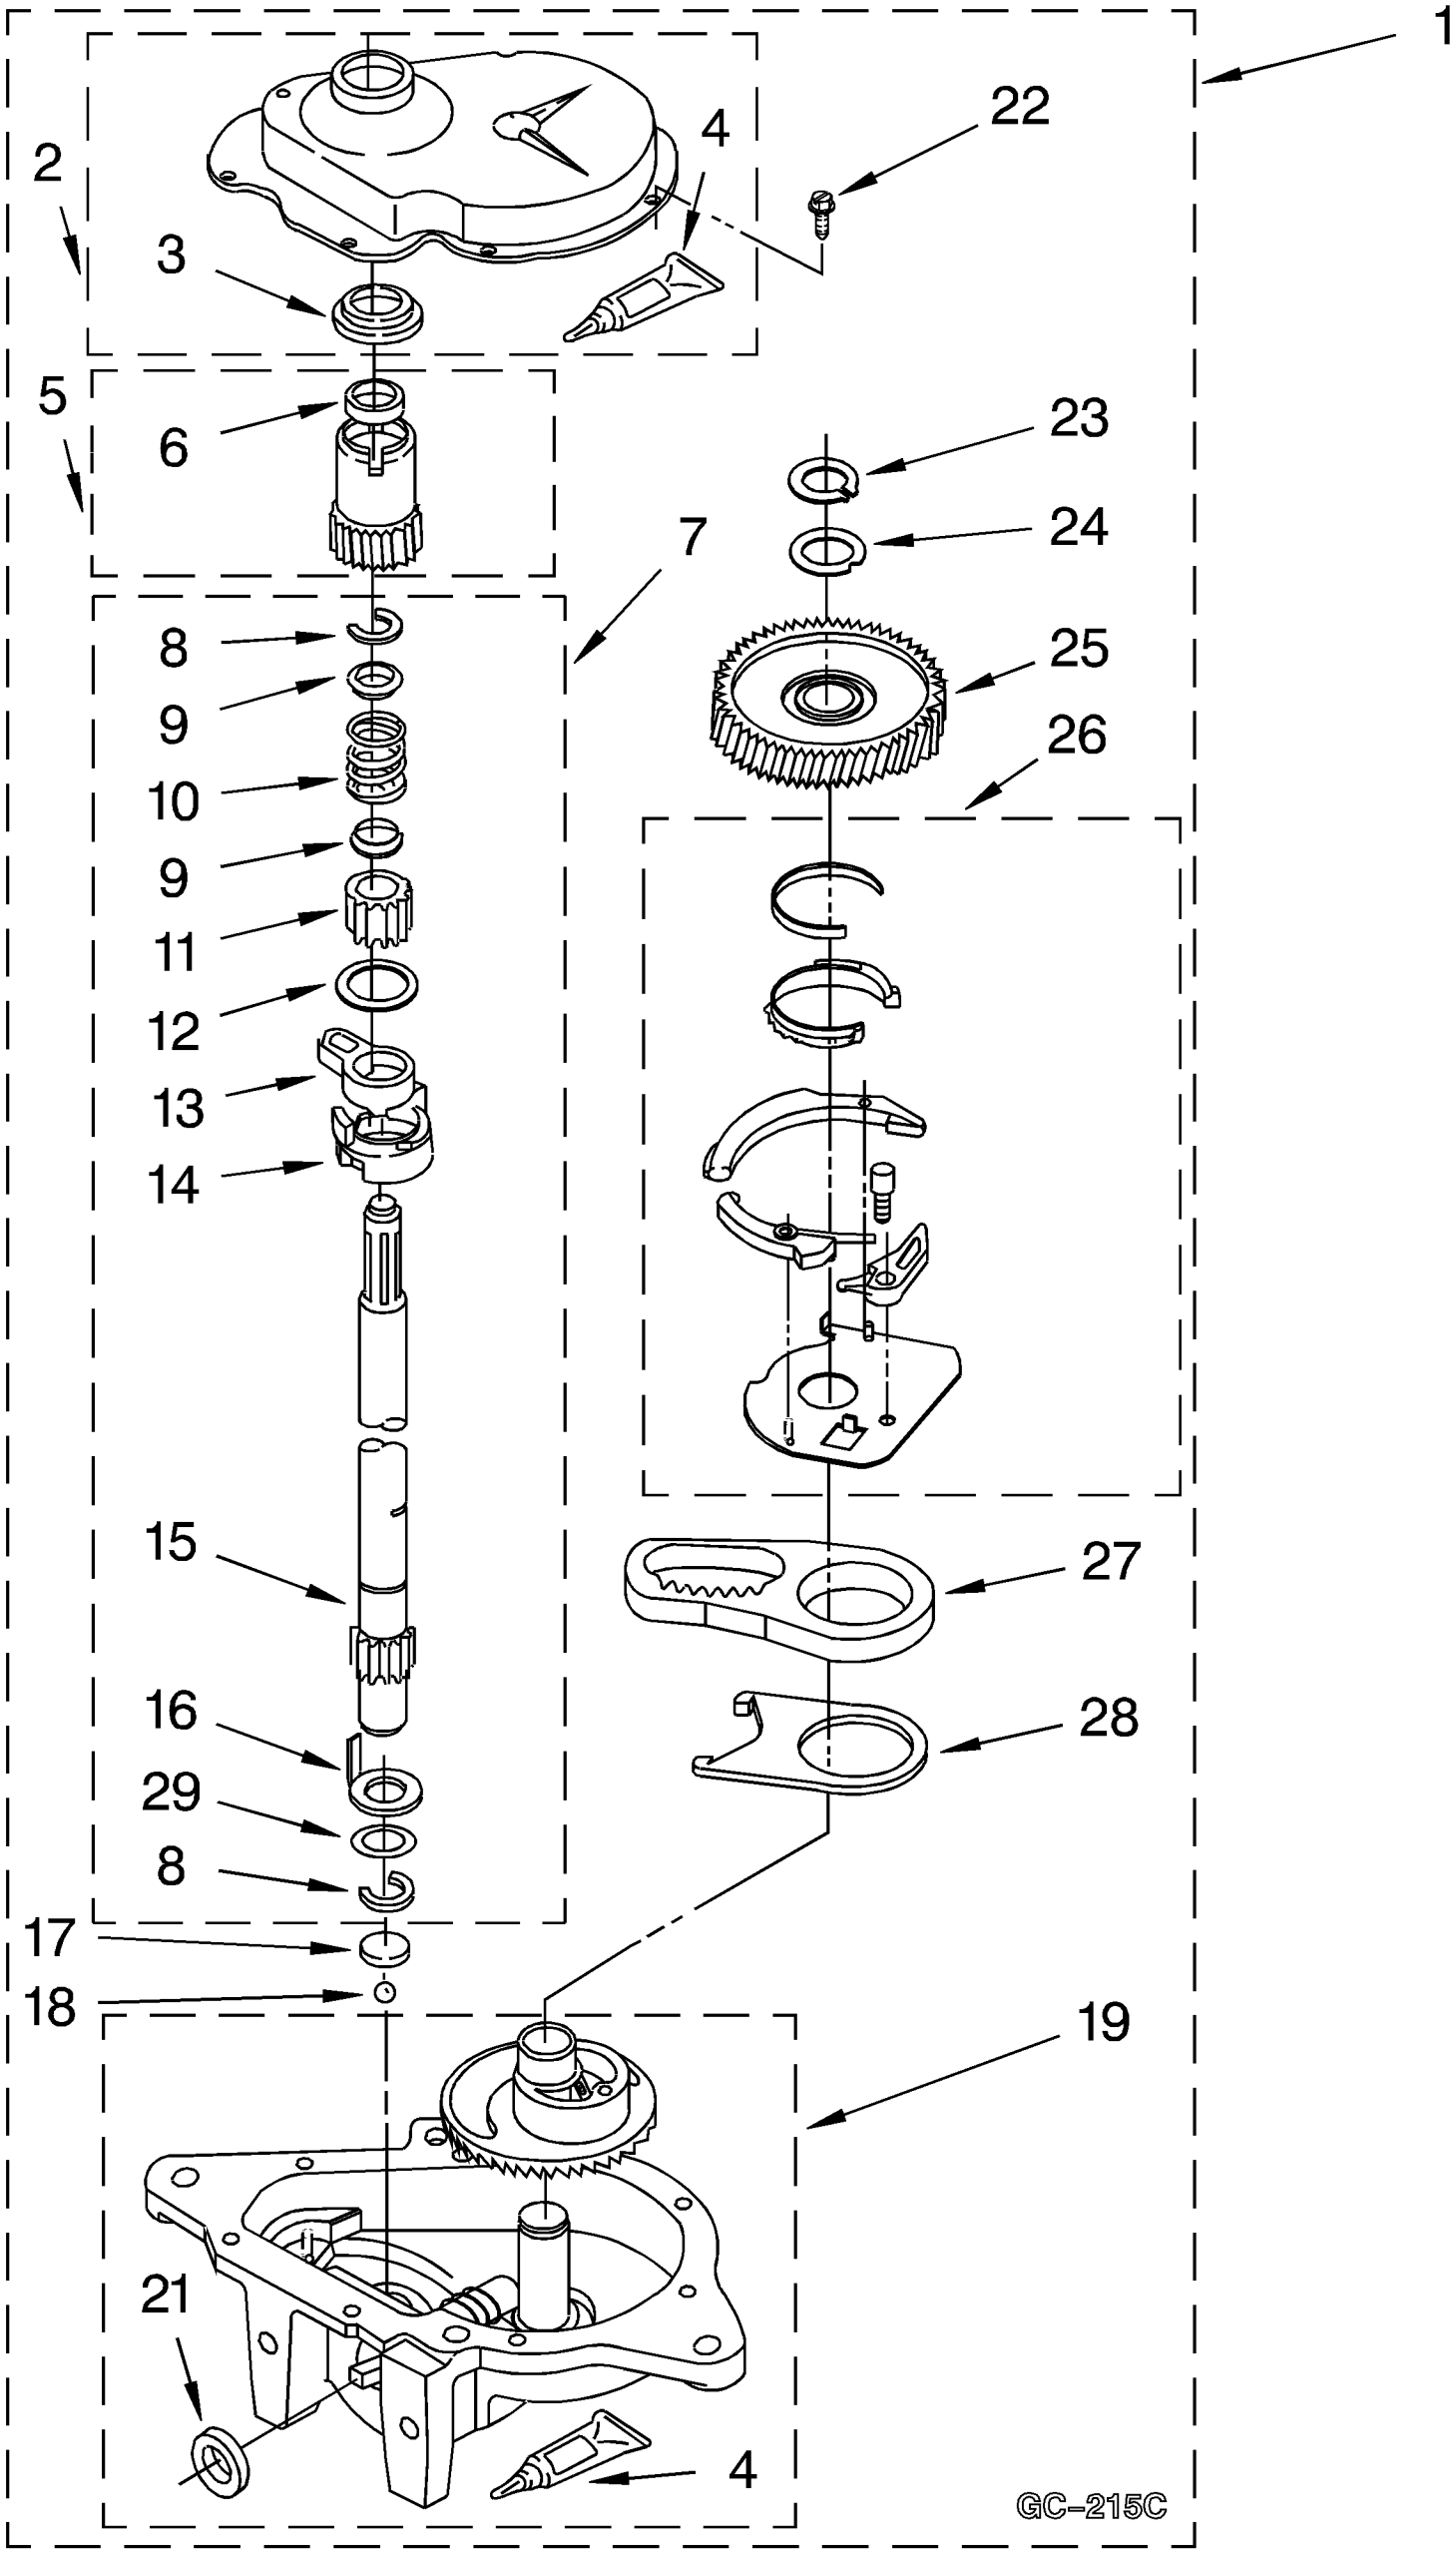


GC-215C

GC-215C

1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

WATER SYSTEM PARTS
For Models: LSR8233JQ0, LSR8233JT0
(Designer White) (Biscuit)

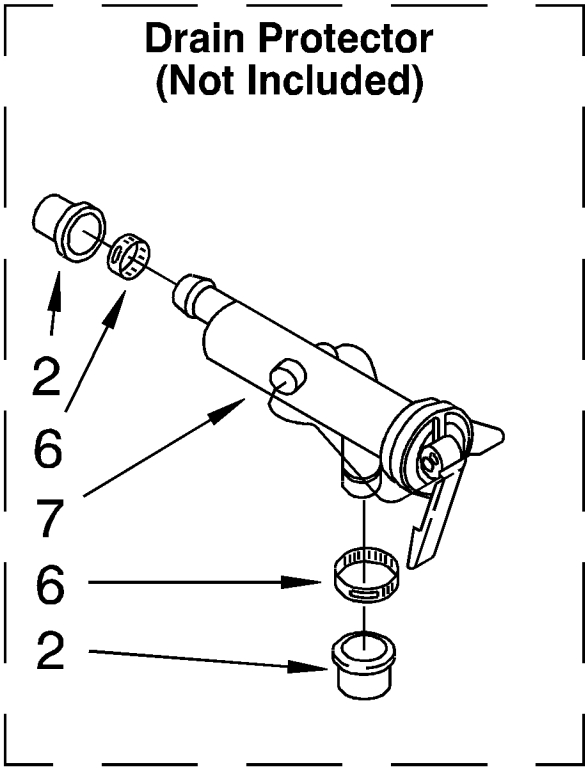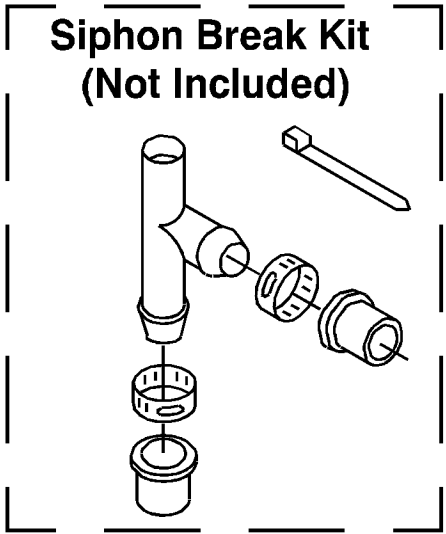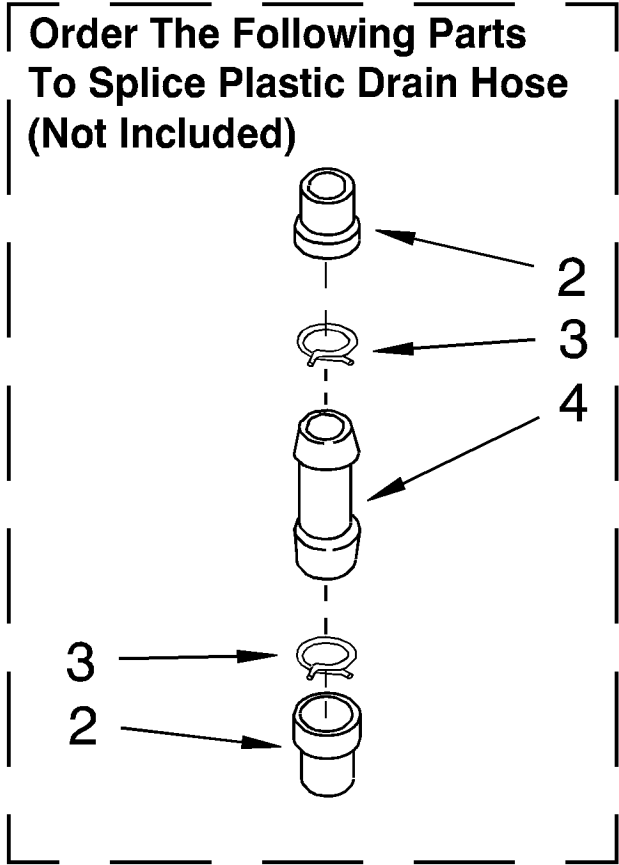


WS400

1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: LSR8233JQ0, LSR8233JT0

(Designer White) (Biscuit)

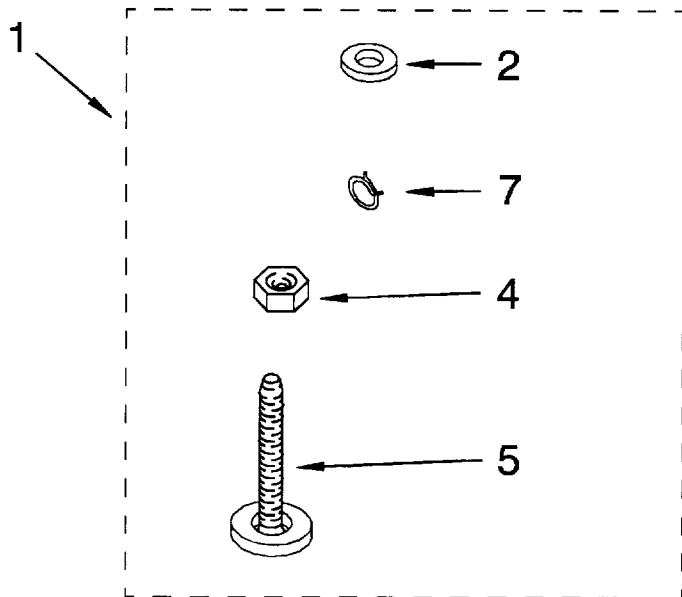

1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose (1-1/16 x 5/8) (4)
4	3359452	Nut, Lock (3/8-16)
5	389102	Foot, Front (2)
7	3366912	Clamp, Hose

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350938	Primer, Gray
350930	White
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

OIL

350572	Oil, Gearcase (16 Oz.)
--------	------------------------

LUBRICANT

285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)
--------	---

SEALER

285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
--------	-------------------------------------

SHIPPING KIT

3348675	Shipping Kit
---------	--------------

ACCESSORY PARTS

63580	Fabric Dispenser
367031	Drain Protector
285320	Siphon Break Kit